


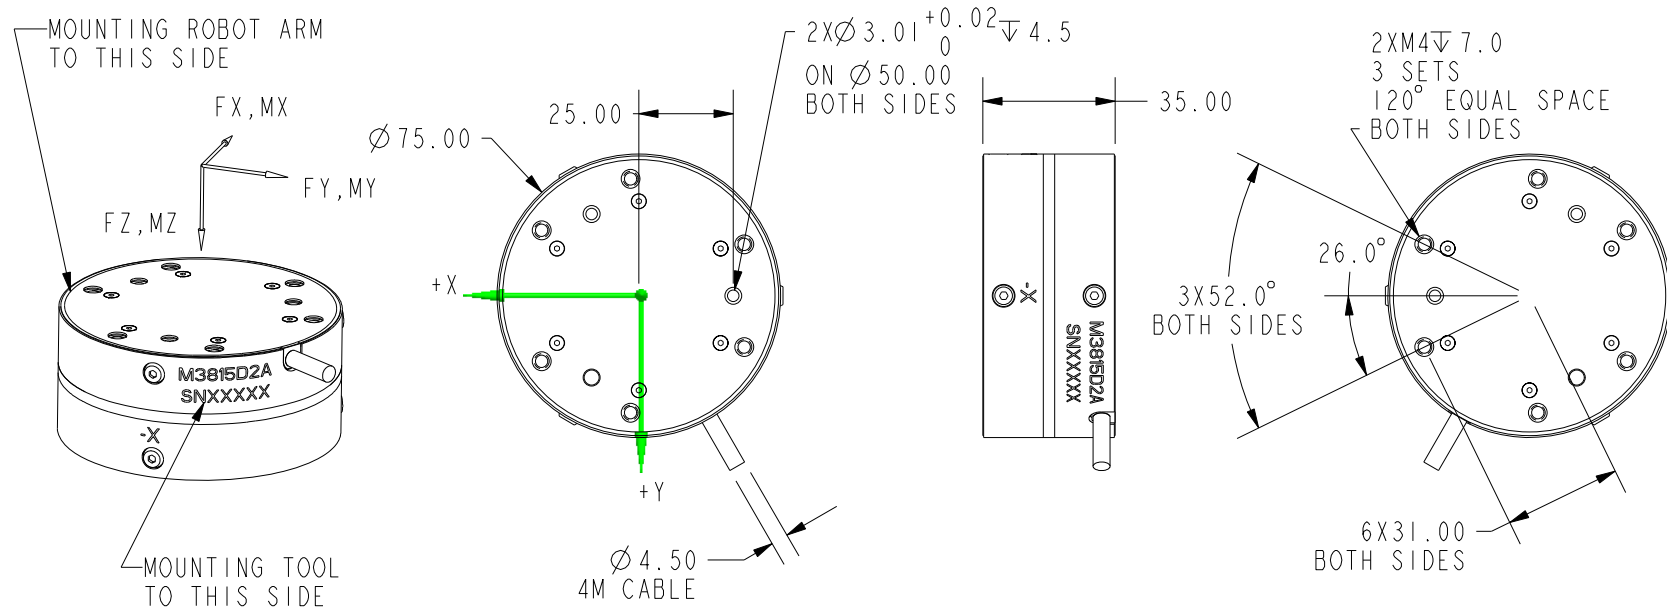

THE OUTPUT IS POSITIVE WHEN THE LOAD IS APPLIED TO THE TOOL SIDE PER COORDINATE AS SHOWN. A 6X6 MATRIX IS PROVIDED FOR DECOUPLING

	Fx	Fy	Fz	Mx	My	Mz
CAPACITY (N/Nm)	260	260	260	20	20	20
OUTPUT * F.S.(V)	5	5	5	5	5	5

LEMO PIN ASSIGNMENT - TWISTED PAIR COLOR CODES

PIN #	FUNCTION	PIN #	FUNCTION	PIN #	FUNCTION
1	+FX WT(BN)	6	-FZ BN(BL)	10	-MY BN(RD)
2	-FX BN(WT)	7	+MX YL(BN)	11	+MZ WT(BK)
3	+FY OG(BN)	8	-MX BN(YL)	12	-MZ BK(WT)
4	-FY BN(OG)	9	+MY RD(BN)	17	NA
5	+FZ BL(BN)	18	+V 24V OG(BK) & BL(BK) & BK(BL)		
19	GND RD(BK)&BK(RD)&YL(BK)&BK(YL)		SHIELD TO CONNECTOR SHELL		
WT=WHITE, BN=BROWN, OG=ORANGE, BL=BLUE, YL=YELLOW, RD=RED, BK=BLACK					

SPECIFICATIONS

POWER SUPPLY (V)	+24V
OVERLOAD CAPACITY (%F.S.)	1000
LOWEST FREE AIR RESONANT FREQ. (HZ.)	950
CROSSTALK - WITH ADJUSTMENT (%F.S.)	2
NON-LINEARITY (%F.S.)	0.5
HYSTERESIS (%F.S.)	0.5
OPERATING TEMP. RANGE (°C)	-40 TO +100
COMPENSATED TEMP. RANGE (°C)	10 TO 70
MASS (KG)	0.41

SUNRISE INSTRUMENTS

www.srisensor.com

SIX AXIS LOADCELL WITH OL STOPS & AMP
D75MM F260N, IP65

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN MM

M3815D2A

REV.
B