


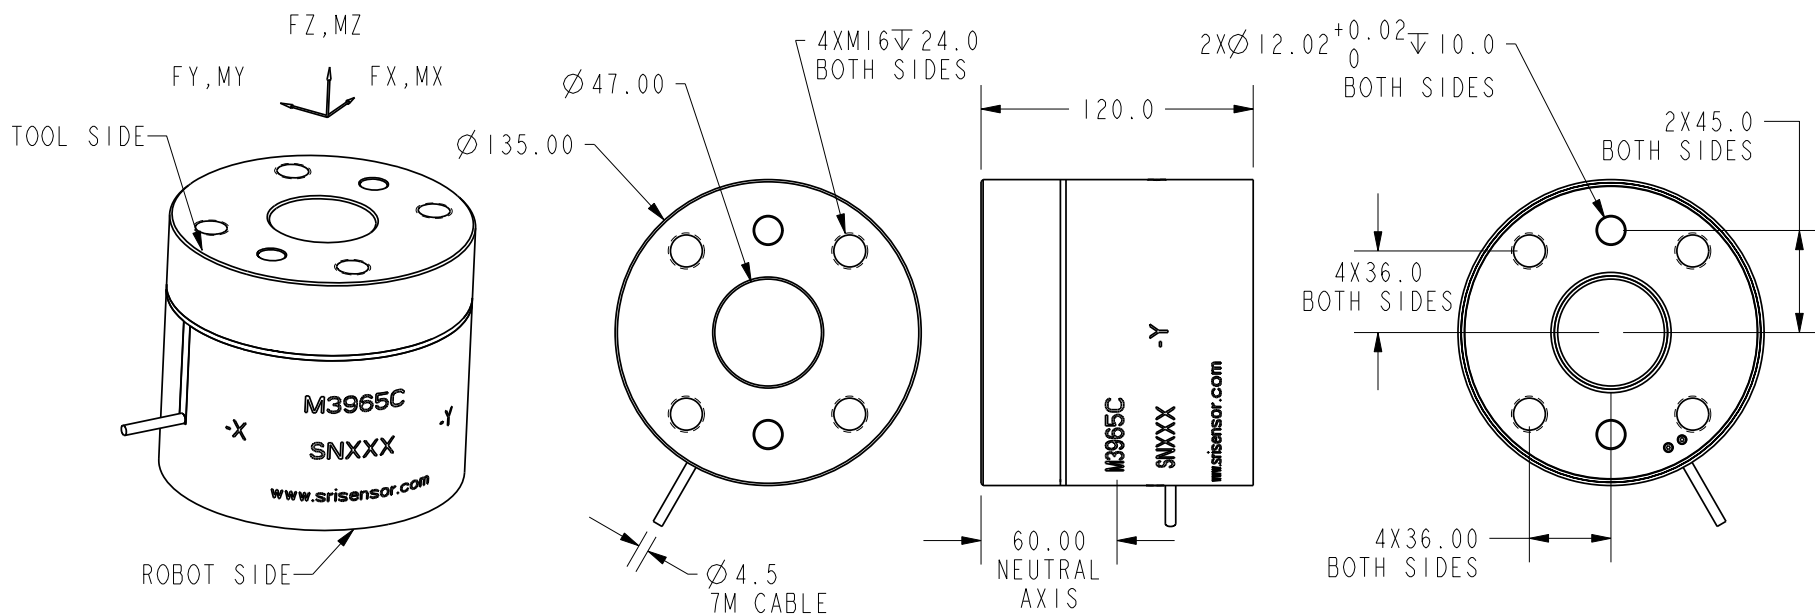

POSITIVE OUTPUT IS EXPECTED WHEN LOAD (FORCE OR MOMENT) IS APPLIED TO THE TOOL SIDE PER COORDINATE SYSTEM AS SHOWN

ALL CHANNELS ARE STRUCTURALLY DECOUPLED. NO DECOUPLING ALGORITHM REQUIRED. STANDARD DATA ACQUISITION SYSTEM CAN BE USED

IP PROTECTION: IP60. USE PART # "M3965CP" FOR IP68 (10M) VERSION

	Fx	Fy	Fz	Mx	My	Mz
CAPACITY (N/Nm)	150000	150000	400000	NA	NA	NA
OUTPUT (mV/V)	2.1	2.1	1.0	NA	NA	NA
BRIDGE RES. (Ω)	350	350	350	NA	NA	NA

WIRING CODE - TWISTED PAIR WIRES

Fx		Fy		Fz	
COLOR	FUNCTION	COLOR	FUNCTION	COLOR	FUNCTION
RED(BLACK)	+EXC.	RED(BROWN)	+EXC.	ORANGE(BLACK)	+EXC.
BLACK(RED)	-EXC.	BROWN(RED)	-EXC.	BLACK(ORANGE)	-EXC.
YELLOW(BROWN)	+SIG.	BLUE(BROWN)	+SIG.	YELLOW(BLACK)	+SIG.
BROWN(YELLOW)	-SIG.	BROWN(BLUE)	-SIG.	BLACK(YELLOW)	-SIG.

SPECIFICATIONS

EXCITATION MAX. (V)	15
OVERLOAD CAPACITY (%F.S.)	150
FREE AIR RESONANT FREQ. (HZ.)	5200
CROSSTALK (%F.S.)	5.0
NON-LINEARITY (%F.S.)	1.0
HYSTERESIS (%F.S.)	1.0
OPERATING TEMP. RANGE ($^{\circ}$ C)	-40 TO +100
MASS (KG)	7.4

SUNRISE INSTRUMENTS

www.srisensor.com

THREE AXIS CIRCULAR LOAD CELL
D135MM F400KN

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN MM

M3965C

REV.
A