

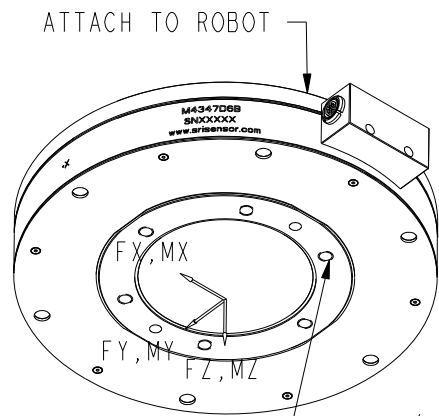
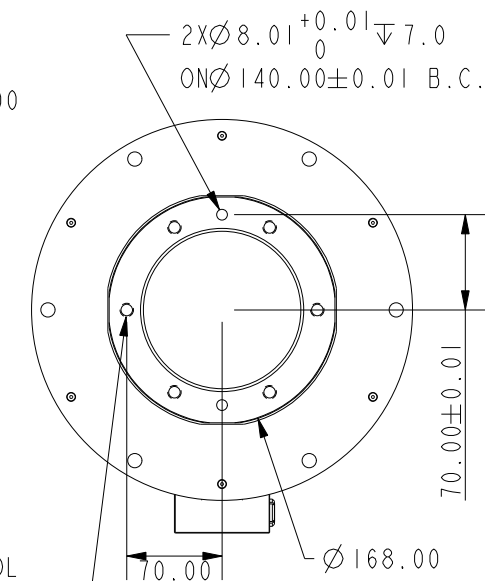


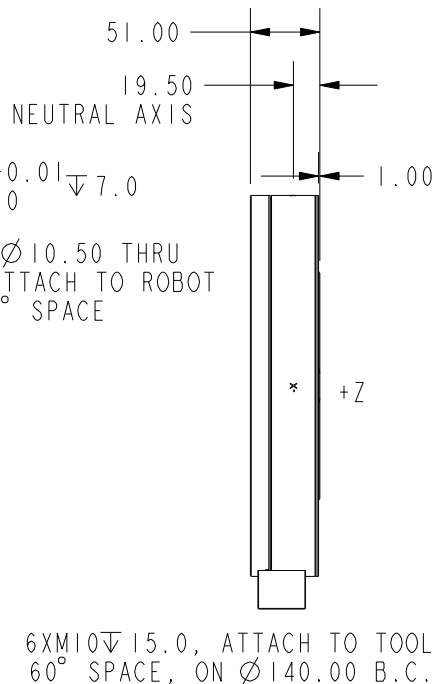

ATTACH TO TOOL

LEMO CONNECTOR
ECG.2B.319.CLL
MATING CONNECTOR
FGG.2B.319.CLAD52Z
MATING CONNECTOR & CABLE
ASSEMBLY ORDERED SEPARATELY

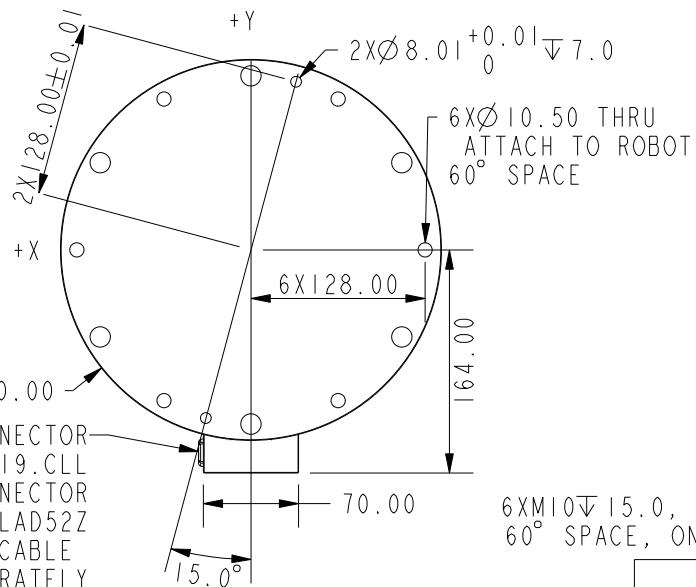

THE OUTPUTS ARE STRUCTURALLY DECOUPLED
NOTE: MZ IS RATED TO 6KNM, BUT CALIBRATED TO 3KNM
DUE TO LIMITATION OF CALIBRATION TOOLING

	Fx	Fy	Fz	Mx	My	Mz
CAPACITY	N/A	N/A	12KN	N/A	N/A	N/A
OUTPUT @ F.S.(V)	N/A	N/A	9.0	N/A	N/A	N/A

DIFFERENTIAL OUTPUT $\pm 10V$ (MAX), CENTERED AT 0V

LEMO PIN ASSIGNMENT - TWISTED PAIR COLOR CODES

PIN #	FUNCTION	PIN #	FUNCTION	PIN #	FUNCTION
1	+FX WT(BN)	6	-FZ BN(BL)	10	-MY BN(RD)
2	-FX BN(WT)	7	+MX YL(BN)	11	+MZ WT(BK)
3	+FY OG(BN)	8	-MX BN(YL)	12	-MZ BK(WT)
4	-FY BN(OG)	9	+MY RD(BN)	17	NA
5	+FZ BL(BN)	18	+V 24V OG(BK) & BL(BK) & BK(BL)		
19	GND RD(BK)&BK(RD)&YL(BK)&BK(YL)		SHIELD TO CONNECTOR SHELL		
WT=WHITE, BN=BROWN, OG=ORANGE, BL=BLUE, YL=YELLOW, RD=RED, BK=BLACK					

SPECIFICATIONS

POWER SUPPLY (V)	+24V
OVERLOAD CAPACITY (%F.S.)	300
FREE AIR RESONANT FREQ. (HZ.)	2500
CROSSTALK (%F.S.)	2.5
NON-LINEARITY (%F.S.)	0.5
HYSTERESIS (%F.S.)	0.5
OPERATING TEMP. RANGE (°C)	-40 TO +100
COMPENSATED TEMP. RANGE (°C)	10 TO 70
MASS (KG)	9.9

SRI- SUNRISE INSTRUMENTS
www.srisensor.com

UNIAXIAL CIRCULAR LOAD CELL
D280MM

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN MM

M4347D6B

REV.
A